

# Network Controller K206




The **Network Controller** is the central hub that captures data from the network of sensors. It is a robust computer with a simple user interface and communications to both the local device network and the Internet, or independently via a 4G or 5G connection.

K206 uses proprietary Kelsius software and eliminates the need for antivirus software or OS updates.

Current and historical records can be viewed on the graphic touch screen. Simple functions such as send / receive / alarm disable are accessible on open menu.

Management and engineering functions are available but password protected.

The unit has an integral back-up battery that enables the system to continue operating for five hours during power interruptions. Staff will be alerted if the device fails to communicate with the portal.

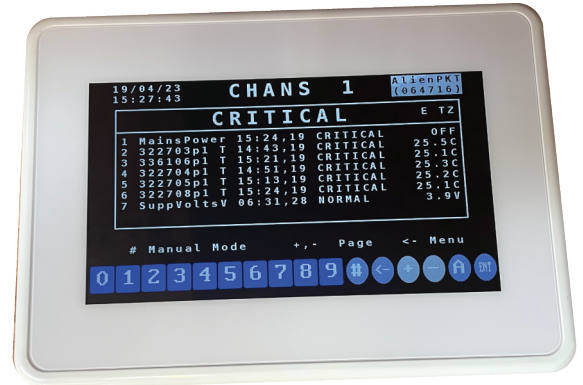

Specification	
<b>Product Code:</b>	K206
<b>Internet Access:</b>	Via Ethernet Local Area Network, built-in WiFi or cellular network. (HTTP, POP3, SMTP. Secured access using TLS1.2: HTTPS, POP3S, SMTPS).
<b>Local Device Network:</b>	Wireless link MHz (Europe): 916 MHz (USA). (Up to 300 meters single hop) with Repeaters for larger networks.
<b>Operating System:</b>	The system operates on a proprietary Kelsius operating system and there is no need for OS updates or antivirus.
<b>Alarms:</b>	Email/SMS Local audible sounder / super-bright LED flasher Voice-call (can escalate sequentially if unanswered)
<b>Management:</b>	Each installation has matching Website portal for data viewing and adjustment of system settings. Fully remote reprogrammability (OS & programs).
<b>Number of Channels:</b>	250
<b>Power Supply:</b>	5V 2A USB-C mains adapter, POE
<b>Battery Back-up:</b>	3.6V 2500mAHr. LiIon. Approx. 5 hours battery back-up
<b>IP rating:</b>	54
<b>Size:</b>	W 207mm, H 152mm, D 52mm
<b>Weight:</b>	0.615 kg (1.35lbs)